


# FLINT & WALLING 1 PHASE CONTROL BOX COMPONENTS

(For Pricing Refer To Repair Parts Price List FW0005)

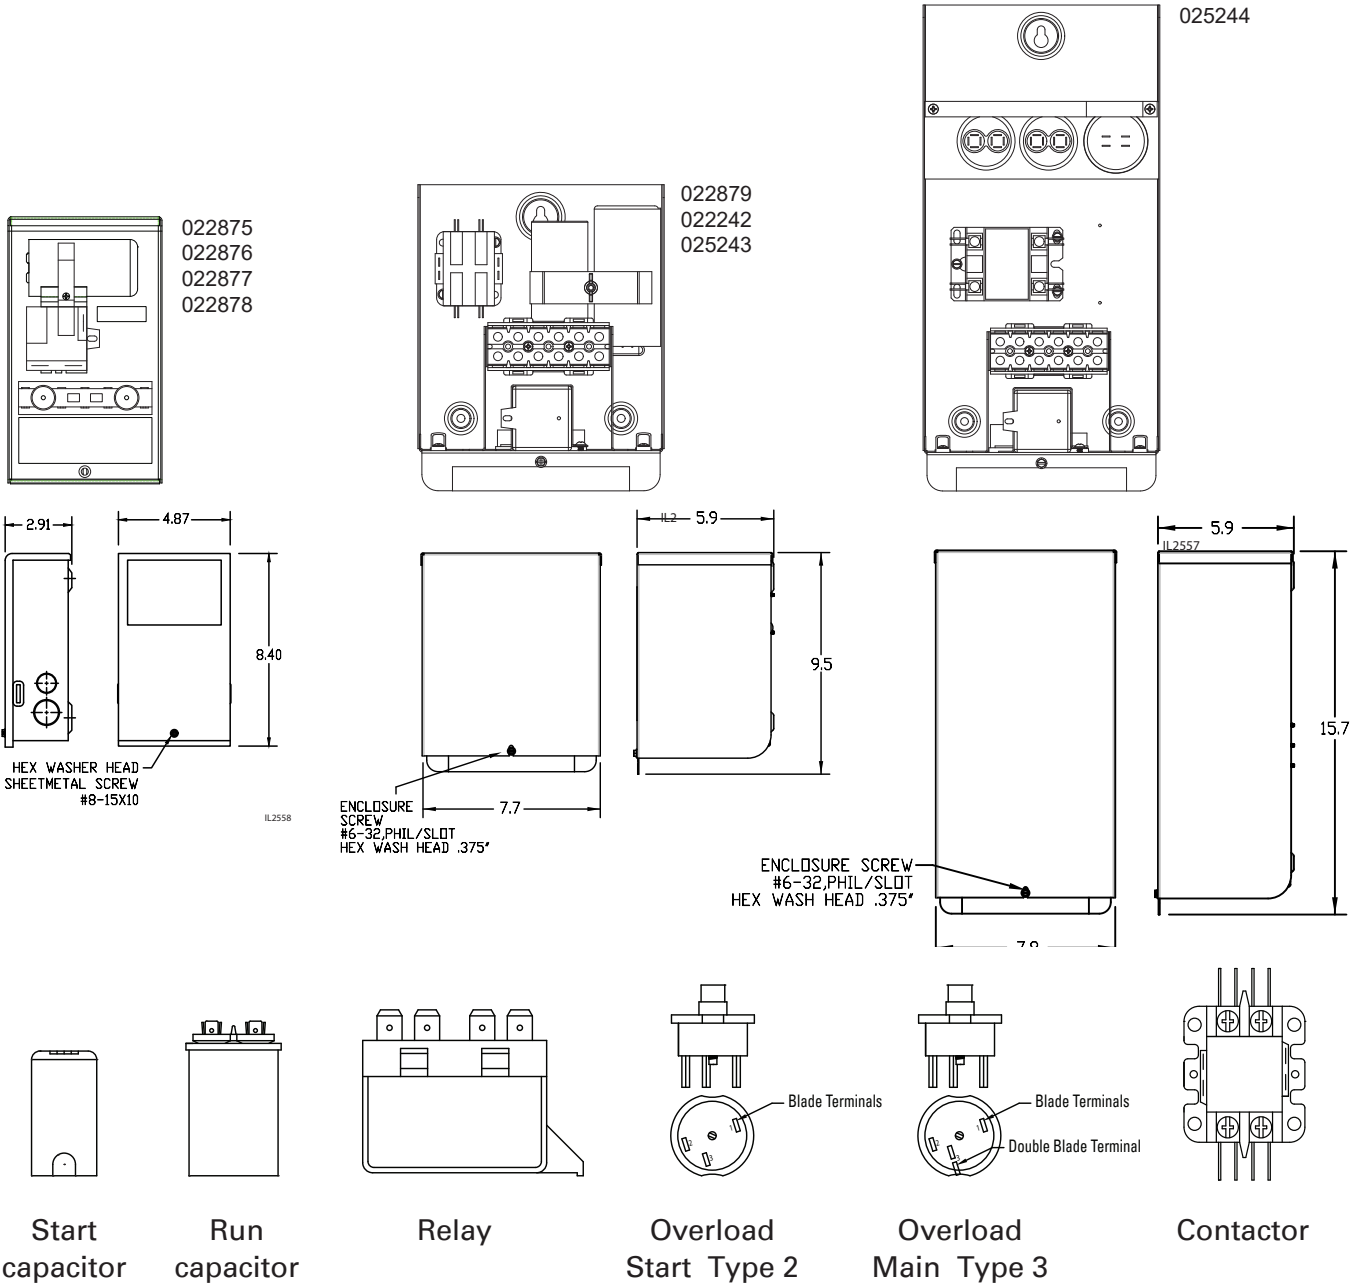

	1/2 HP		3/4 HP	1 HP	1-1/2 HP	2 HP	3HP	5HP
	115V	230V	230V	230V	230V	230V	230V	230V
Control Box P/N	022875	022876	022877	022878	022879	025242	025243	025244
Start Cap	024565	024566	024567	024568	024568	024568	025412	025413
Run Cap	N/A	N/A	N/A	N/A	024569	024570	025414	025415
Relay	024571	024572	024572	024572	024572	024572	024572	025416
Main Overload	N/A	N/A	N/A	N/A	024573	024574	025417	025419
Start Overload	N/A	N/A	N/A	N/A	N/A	024575	025418	025420
Contactor	N/A	N/A	N/A	N/A	N/A	025421	025421	025422