



ATTENTION!

Tank is shipped separately for transit purposes, and must be installed as follows:

1. Thread tape or pipe dope should be placed on the threads of the tank before installation.
2. Install tank into the empty port on the system manifold.
3. Tighten tank 1/4 to 1/2 turn past hand tight.
4. If leaks occur at the tank connection after the system is pressurized, tighten in 1/4 turn increments until leak stops.

024878 B



ATTENTION!

Tank is shipped separately for transit purposes, and must be installed as follows:

1. Thread tape or pipe dope should be placed on the threads of the tank before installation.
2. Install tank into the empty port on the system manifold.
3. Tighten tank 1/4 to 1/2 turn past hand tight.
4. If leaks occur at the tank connection after the system is pressurized, tighten in 1/4 turn increments until leak stops.

024878 B